


BWM Reference June 2019

Body Worn Mesh Radio Quick Reference Guide




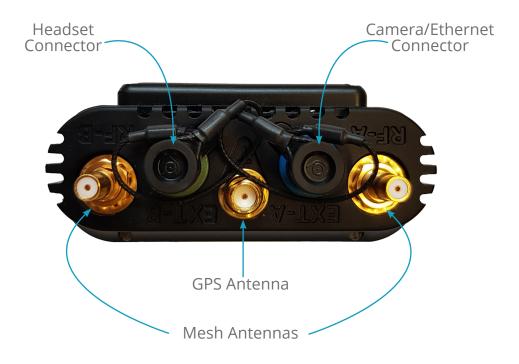

visualengineering.co.uk visualengineering.org

BWM Reference June 2019



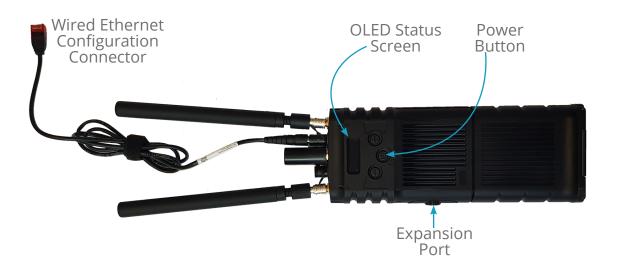

visualengineering.co.uk visualengineering.org



BWM Reference June 2019

To power the BWM on give a long press on the power button until the OLED screen is illuminated.

Power the BWM off with a similar long press.



The OLED screen gives battery % remaining and the time to expiry in minutes.

Default IP Addresses of the BWM radios

Node	IP Address
BWM 1	192.168.1.100
BWM 2	192.168.1.101

Default IP Addresses of the BWM cameras

Camera	IP Address
Body Worn Camera	192.168.1.196
Helmet Camera	192.168.1.197

Default BWM Login

The User Name should be left blank with the following password:

Default User Name:

Default Password:

Eastwood

Visual Engineering Technologies LTD

Kemps Farm Stanway Colchester Essex CO3 8NB UK



Tel: +44 (0)1206 211842 Web: www.visualengineering.co.uk Email: sales@visualengineering.co.uk